

Design Number TRC/BP 120-18
PERIMETER FIRE BARRIERS

Rectorseal Corporation

Biostop 750, Biostop 800, FlameSafe FS 3000, FlameSafe FS 4000, Metacaulk 1200 Spray, and Metacaulk 1500 Spray

ASTM E 2307

T-Rating 1-1/4 hr

F-Rating 2 hr

ASTM E 2307/ASTM E 1399 Cycling


Class IV: 500 cycles @ 30 cpm

± 0.25% horizontal movement

± 6.25% vertical shear movement

UL 2079

L-Rating- <1.0 SCFM/LF

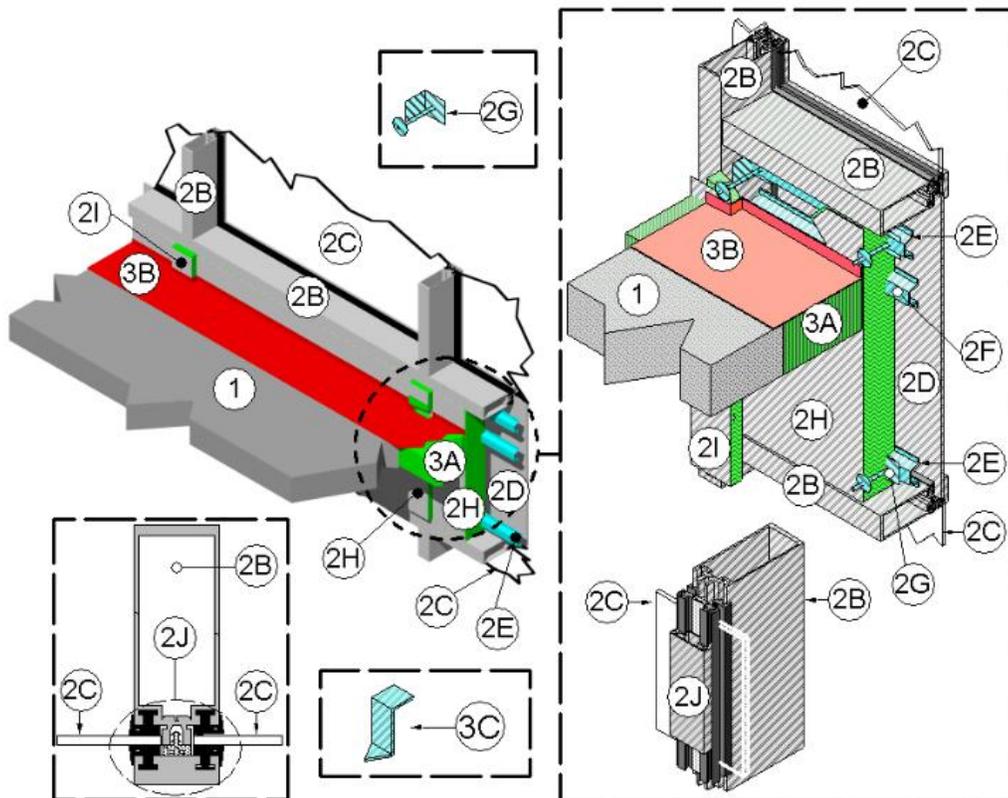

1. CONCRETE FLOOR ASSEMBLY: Two-hour rated concrete floor assembly made from either lightweight or normal weight concrete with a density of 100 to 150 pcf, having a min. thickness of 4-1/2 in. at the joint face. When a longitudinal recess (blockout) is required to contain an architectural joint system, increase

concrete floor assembly thickness to maintain a min. thickness of 4-1/2 in. and accommodate depth of blockout formed in the concrete: blockout width unrestricted.

2. CURTAIN WALL ASSEMBLY: Incorporate the following construction features:

Division 07 Thermal Protection

07 84 00 Firestopping

07 84 53 Building Perimeter Firestopping

- A. Mounting Attachment: (Not shown) Attach the aluminum framing (Item 2B) to min. 1/4 in. structural steel framing according to the curtain wall manufacturer's instructions to allow vertical shear movement only. Connect mounting attachments to the joint face of the concrete floor assembly (Item 1) in accordance with the curtain wall manufacturer's instructions. Secure mounting attachments to each mullion of aluminum framing (Item 2B) in the perimeter joint protection (Item 3) region at a max. spacing of 60 in. on center (oc).
- B. Aluminum Framing: Use hollow rectangular aluminum extruded tubing with min. overall dimensions of 0.100 in. thick, 3-3/4 in. high (total 5-5/16 in. high with mullion and transom covers) and 2-1/2 in. wide. Locate mullions min. 60 in. oc and locate transoms a min. 34 in. oc. For the spandrel region, locate the lower transom min. 13-3/4 in. below the concrete floor assembly (Item 1) as measured from the underside of the floor to the top side of the transom and locate the upper transom a min. 4-1/2 in. above the concrete floor assembly (Item 1) as measured from the top surface of the floor to the underside of the transom.
- C. Vision Glass Panels: Sized and installed into aluminum framing (Item 2B) according to the curtain wall system manufacturer's guidelines. Use min. 1/4-in. thick clear, heat strengthened (HS) glass or tempered glass with a max. width and height less than the aluminum framing (Item 2B) on center spacing, which allows the glass to be secured between the notched shoulder of the aluminum framing (Item 2B) and pressure bar. Secure glass panels with a thermal break (rubber extrusion), pressure bar (aluminum extrusion), min. 1/4-20 x 5/8 in. long screws, and a snap face (aluminum extrusion).
- D. Aluminum Spandrel Panels: Size and use aluminum panels in the spandrel and attached to curtain wall aluminum framing (Item 2B) according to the curtain wall system manufacturer's guidelines. Use min. 1/8 in. thick sheet aluminum with max. dimensions: 34 inches x 60 in..
- E. Steel Hat Channels: Use nominal 2-1/2 in. wide, 7/8 in. deep, min. 24 GA, steel hat channels. Span steel hat channels between mullions (aluminum framing – Item 2B) to secure the curtain wall insulation (Item 2H). Locate steel hat channels horizontally, at a max. 3 in. above the lower transom and 3 in. below the upper transom of the spandrel area, and at max. 24 in. oc within the spandrel area. Secure each steel hat channel to the mullions (aluminum framing – Item 2B) on both ends. Cut the steel hat channel and form a min. 2 in. tab folded 90° to horizontal position of steel hat channel. Use min. No. 10 self-tapping screws to attach steel hat channels to mullions (aluminum framing – Item 2B).
- F. Insulation Reinforcement: In addition to the steel hat channels (Item 2E), place an additional steel hat channel (Item 2E) to reinforce the perimeter joint protection (Item 3). Locate insulation reinforcement behind the curtain wall insulation (Item 2H) at the mid-depth of perimeter joint protection (Item 3). Secure insulation reinforcement in the same manner as steel hat channels (Item 2E).
- G. Impaling Pins: Attach curtain wall insulation (Item 2H) to the steel hat channel (Item 2E) using min. 12 GA steel cup-head pins spaced max. 8 in. oc at the centerline of the vertical leg. Size impaling pins to the curtain wall insulation (Item 2H) thickness to maintain a firm attachment to the steel hat channel (Item 2E). Install impaling pins so that the interior face of the curtain wall insulation (Item 2H) is flush with the interior face of the aluminum framing (Item 2B).
- H. Curtain Wall Insulation: Use a nominal 2 in. thick, 8 pcf, mineral wool batt insulation faced on one side with aluminum foil scrim (vapor

Division 07 Thermal Protection

07 84 00 Firestopping

07 84 53 Building Perimeter Firestopping

retarder), which is exposed to the room interior and installed between and flush with interior face of aluminum framing (Item 2B). Use only Intertek certified products meeting the above min. requirements. Secure the curtain wall insulation using impaling pins (Item 2G), which are attached to steel hat channels (Item 2E). Seal all meeting edges of curtain wall insulation with nominal 4in. wide pressure sensitive aluminum foil faced tape centered over the junction so that approximately 2 in. of tape covers each edge of the adjacent curtain wall insulation. Apply pressure sensitive aluminum foil faced tape over all meeting edges of curtain wall insulation and aluminum framing (Item 2B) so that approximately 2 in. covers each edge of the adjacent material.

- I. Framing Covers: Make from strips of 2 in. thick by 8 in. wide, 8 pcf density, mineral wool batt insulation faced on one side with aluminum foil scrim (vapor retarder), which is exposed to the room interior. Center framing covers over all aluminum framing (Item 2B) and secure using impaling pins (Item 2G). Do not pass framing covers through the perimeter joint protection (Item 3). Allow framing covers to abut top and bottom surfaces of the perimeter joint protection (Item 3) provided that no deformation occurs. Use only Intertek certified products meeting the above min. requirements.
 - J. Aluminum Framing Attachment: Secure vision glass panels (Item 2C) using a thermal break (thermal-set rubber extrusion), pressure bar (aluminum extrusion), 1/4-20, 5/8in. long screws, and a snap face (aluminum extrusion). Insulate vision glass panels (Item 2C) in spandrel area using curtain wall insulation (Item 2H).
3. PERIMETER JOINT PROTECTION: Do not exceed an 8 in. nominal joint width (joint width at installation). Incorporate the following construction features for

the perimeter joint protection (also known as perimeter fire barrier system):

- A. Packing Material: Use a min. 4 in. thick, 4 pcf density, mineral wool batt insulation installed with the fibers running parallel to the edge of concrete floor assembly (Item 1) and curtain wall assembly (Item 2). Cut packing material width to achieve 25% compression when installed in the nominal joint width. Compress the packing material into the perimeter joint. Tightly compress together splices (butt joints) in the lengths of packing material by using min. 1/4 in. compression per piece of packing material. Use only Intertek certified products meeting the above minimum requirements. When a spray coating is used, locate the top surface of the packing material flush with the top surface of the concrete floor assembly (Item 1). When the non-sag or self leveling silicone sealant is used, recess the top surface of the packing material 1/4 inch from the top surface of the concrete floor assembly (Item 1).

- B. CERTIFIED MANUFACTURER: Rectorseal Corporation

CERTIFIED PRODUCT: Biostop, FlameSafe, Metacaulk

MODEL: Biostop 750, Biostop 800, FlameSafe FS 3000, FlameSafe FS 4000, Metacaulk 1200 Spray, or Metacaulk 1500 Spray

Fill, Void or Cavity Material: Apply either spray coating or sealant over the packing material (Item 3A) as follows:

Spray Coating – Spray apply the liquid to cover the exposed top surface of the packing material (Item 3A) compressed and installed in the perimeter joint. Apply a min. wet film thickness of 1/8 inch and overlap the spray coating a min. 1/2 in. onto the adjacent curtain wall assembly (Item 2) and concrete floor assembly (Item 1). When the spraying process is stopped and the

Division 07 Thermal Protection

07 84 00 Firestopping

07 84 53 Building Perimeter Firestopping

applied spray coating cures to an elastomeric film before installation process is restarted, then overlap the edge of the cured spray coating at least 1/8 in. with the liquid spray coating.

Sealant – Apply non-sag or self leveling sealant to cover the exposed surface of the packing material (Item 3A) compressed and installed in the perimeter joint. Apply min. 1/4 in. thickness non-sag or self leveling sealant over the packing material (Item 3A) and finish flush with the top surface of the concrete floor assembly (Item 1).

- C. Support Clips: (Optional)
Recommended for installations subject to vertical shear movement. Use standard 20 GA galvanized steel Z-shaped clips having the following nominal dimensions: 1 in. wide by 3 in. high with a 2 in. upper leg and a 3 in. lower leg.